TREDWEAR.com

Installation/Care instructions

NOTE: Our warranty does not cover improperly installed product or exposure to unauthorized chemicals.

* All kit materials and tires must be dry and kept in a climate no colder than **65 deg F for a min of 1 hr before installation.**

- Clean tire sidewall with a strong detergent, (no petroleum, citrus) and rub dry. Up to 5 applications of cleaner and scrubbing are reqd. **(Especially for new tires, they are full of harmful acids that will cause staining if not stripped clean)** Next, scuff the surface w the supplied sand paper.
- **NOTE: Do not remove rubber with the sand paper.** Only a light scuff is needed. Removing material from the sidewall could compromise tire integrity.
- Wipe the sidewall **AND THE LETTERS** with 50% - 70% Isopropyl alcohol, (dillute w water if concentration is higer.) Racing font™ tips below- instructions cont. on reverse side.

Racing Font™ Installation Tips

When placing the Racing Font™ Letters there are some things to note. One of the keys to the superior look of our letters is that they are **INDIVIDUALLY CURVED.** This allows them to nest together tightly around the curved sidewall. This also requires special attention to assure the letters are not placed upside down.

Letters to watch out for are H, I, N, O, and S.

Placing these upside down will result in an unsatisfactory appearance. The curve will be opposite of the desired direction

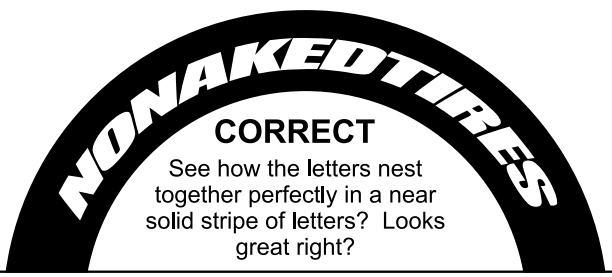

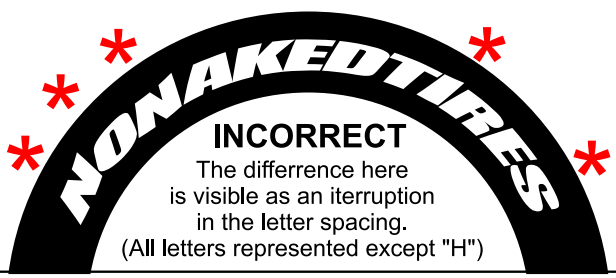

* Problem areas with upside down letters

How to use the TredWear Curve-Match™ applicator

Your TredWear Tire kit uses a Curve-Match™ system to dial in the perfect curve for your particular tire. No matter what the size, or where you place the graphic on the sidewall, it will have the perfect profile, as if it were made for your tire.

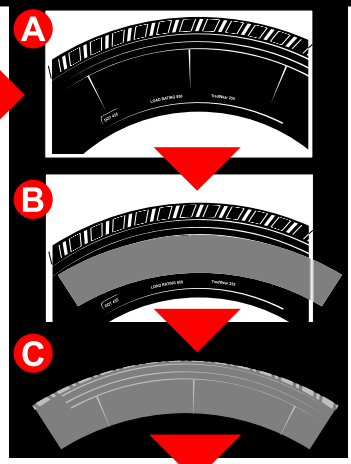

- First, clean and prep the tire per the instructions, on side one of this sheet. **(Illustration A)**
- Next, peel the white backing off the applicator pad and apply it to the tire sidewall in the application area. **(Illustration B)**
- When you peel it away, the tire will leave an imprint in the adhesive that you will use as a placement guide for the graphic. **(Illustration C)**

Note: for some larger graphics, the applicator pad is not included. (2" plus)
Multiple Packing tape strips lapped together can be used as a substitute.

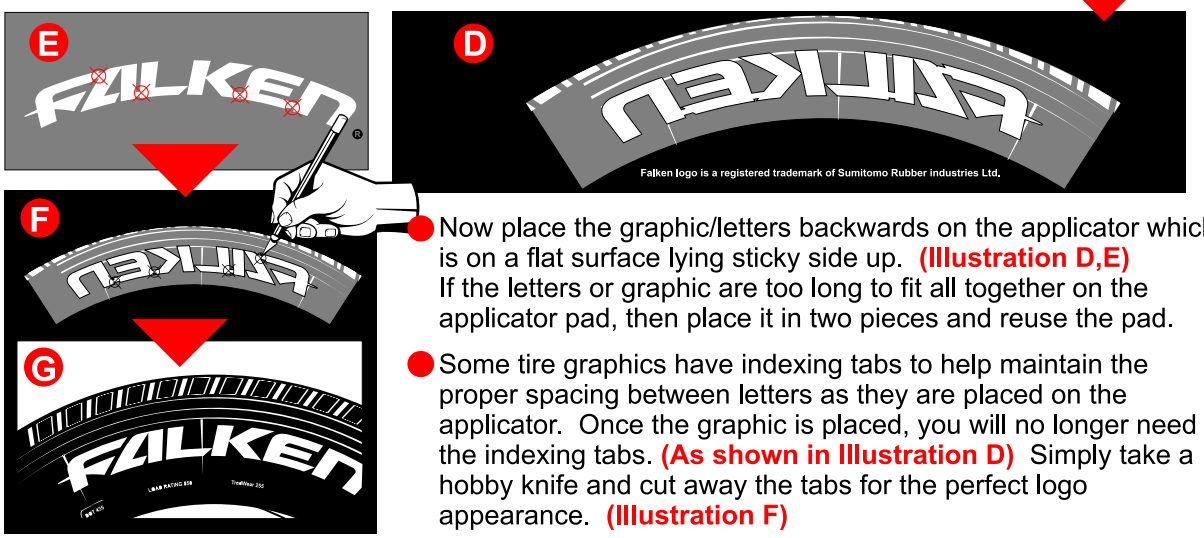

- Now place the graphic/letters backwards on the applicator which is on a flat surface lying sticky side up. **(Illustration D,E)**
  If the letters or graphic are too long to fit all together on the applicator pad, then place it in two pieces and reuse the pad.
- Some tire graphics have indexing tabs to help maintain the proper spacing between letters as they are placed on the applicator. Once the graphic is placed, you will no longer need the indexing tabs. **(As shown in Illustration D)** Simply take a hobby knife and cut away the tabs for the perfect logo appearance. **(Illustration F)**

- Apply the patented tire adhesive to the backside of the graphic
  A **THIN, EVEN** coat is best to avoid runs.
- Place graphic on sidewall in the desired location & rub w thumb.
  Glue will set with working strength in as little as 5-10 seconds.
  Peel away the applicator pad to do the next graphic.
- Check for any areas w insufficient glue and touch up as necessary
  Let tires sit for one hour at temperature to complete the curing process.

CARE INSTRUCTIONS

Our patented Rubber material will stay white for years.

Scrub letters w a nylon bristle brush & Detergent.
Harmful acids can build up on tires that sit for long periods.
Clean at least once a month to avoid staining.
DO NOT USE CLEANERS containing Bleach or Petroleum.
DO NOT USE TIRE DRESSING. It can stain the letters.

#nonakedtires™

204 Mildred St. Columbiana, AL 35051
205 671 5153

TREDWEAR.com®

Enjoy Your #NoNakedTires